## User Guide

Vehicle-Dock WAP Rev. 2.4 (Type: 4600-0225)

#### Information on the different Vehicle-Dock WAP variants

The correct function of the Vehicle-Dock WAP is only warranted if you take the right WORKABOUT PRO model as shown in this overview:

WORKABOUT PRO model	7525C	7527C-G2	7527S-G2/G3
Vehicle-Dock WAP variant	C G1	C G2	S G2/G3

#### Certificate

Vehicle-Dock WAP (here, also called as "Vehicle Cradle") has type-approval of a type of component with regard to Directive 72/245/EEC, as last amended by Directive 2006/28/EC.

Type-approval No.: e1\*72/245\*2006/28\*5035\*00

# Safety information on the installation in a vehicle



**Caution!** Do not mount the vehicle cradle in the area of activity of the airbags.



**Caution!** When installing the cradle, ensure that it does not represent a risk in the event of an accident.



**Caution!** If you have connected the vehicle cradle to the power supply using a cigarette lighter, remove the connector before you leave the vehicle standing for a long period of time.

As the vehicle cradle requires a constant power supply, it could run down the vehicle's battery.

#### Note



Only the manufacturer or authorized partners are allowed to rebuild the vehicle cradle for other WORKABOUT PRO models.

# Liability

The documentation is subject to change without notice. HWU Elektronik GmbH is not liable for the accuracy of the information contained in this manual or for damages resulting from the use of this manual.

#### **Trademarks**

All brands and trademarks mentioned in this document are possibly registered by third parties and are subject to the current legislation and to the rights of their respective owners without reservation. All mentioned names of products, societies, or brands may be registered trademarks of their respective owners. Every right that is not explicitly accorded is reserved.

The absence of an explicit labelling of registered trademarks does not allow the conclusion that this brand was not subject to the rights of third party.

- RAM Mount is a trademark of National Products Inc.
- WORKABOUT PRO is a trademark of Psion Teklogix Inc.

## Mounting in vehicle

To mount the Vehicle Cradle you can take a RAM - Mount. To connect between RAM-Mount and the Vehicle Cradle take the delivered self-locking nuts.



# Wiring Vehicle Power to Vehicle Cradle

Voltage range: 12 - 24 Volt

Variant 1: Cable with open end

Wire assignment:
Blue: minus
Brown: plus

<u>Variant 2:</u> A power cable (AMP - circular plastic connector - 2-pin) extends from your Vehicle Cradle power (Psion Teklogix P/N 13985-002)

#### Pin assignment:

Pin 1: plus Pin 2: minus



Please note that the power supply cable has to be fused with 2 Ampere!

#### Special functions

## Power supply through the RS232-port

5 V (max. 100 mA) are permanently available on the RS232-port PIN-9 at the top end of the Vehicle Cradle when it is connected to the vehicle power supply (12V to 24V).

User Guide Vehicle-Dock WAP 2.4 3 User Guide Vehicle-Dock WAP 2.4

# Information on the mechanical characteristics of the vehicle cradle for different WORKABOUT PRO models

# Part 1 - Side brackets:

The side brackets can be mounted in 2 possible positions:



Fig. 1C
Suitable for WORKABOUT PRO models: 7525C
7527C-G2



 $\label{eq:Fig. 1S} \textit{Suitable for WORKABOUT PRO models:}$ 

7527S-G2/G1

Each side bracket is fixed with 3 screws (see the following figure).



Fig: 3 screws for the side bracket

# Part 2 - Pressure pin holders:



Fig. 3A: Black pressure pins

Suitable for WORKABOUT PRO models: 7525C 7527C-G2 7527S-G2/G3

# Part 3 - LIF-connector:



Fig. 4A
LIF-connector at top, black pressure pins
Suitable for WORKABOUT PRO models:

7525C 7527C-G2 7527S-G2/G3

The side brackets, pressure pin holders and LIF-connector must be arranged for the various WORKABOUT PRO models according to the table.

The right positions and variants of the components are listed in the following table:

WORKABOUT PRO	Vehicle-Dock WAP variant	Side brackets	Pressure pins	LIF-connector
7525C	C G1	Fig. 1C	Fig. 3A	Fig. 4A
7527C-G2	C G2	Fig. 1C	Fig. 3A	Fig. 4A
7527S-G2/G3	S G2/G3	Fig. 1S	Fig. 3A	Fig. 4A

#### Driver

Current driver updates can be downloaded at  $\underline{www.warok.de/downloads/fzgh driver.zip}$  or send an e-mail to  $\underline{info@warok.de}$ .